


FDC100VNX-W, 125VNX-W, 140VNX-W, 100VSX-W, 125VSX-W, 140VSX-W

| Symbol | Content                                                             |                       |
|--------|---------------------------------------------------------------------|-----------------------|
| A      | Service valve connection of the attached connecting pipe (gas side) | φ15.88 (5/8") (Flare) |
| B      | Service valve connection (liquid side)                              | φ9.52 (3/8") (Flare)  |
| C      | Pipe/cable draw-out hole                                            |                       |
| D      | Drain discharge hole                                                | φ20×3places           |
| E      | Anchor bolt hole                                                    | M10×4places           |
| F      | Cable draw-out hole                                                 | φ30×3places           |

Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the units height.
- (6) The model name label is attached on the lower right corner of the front panel.

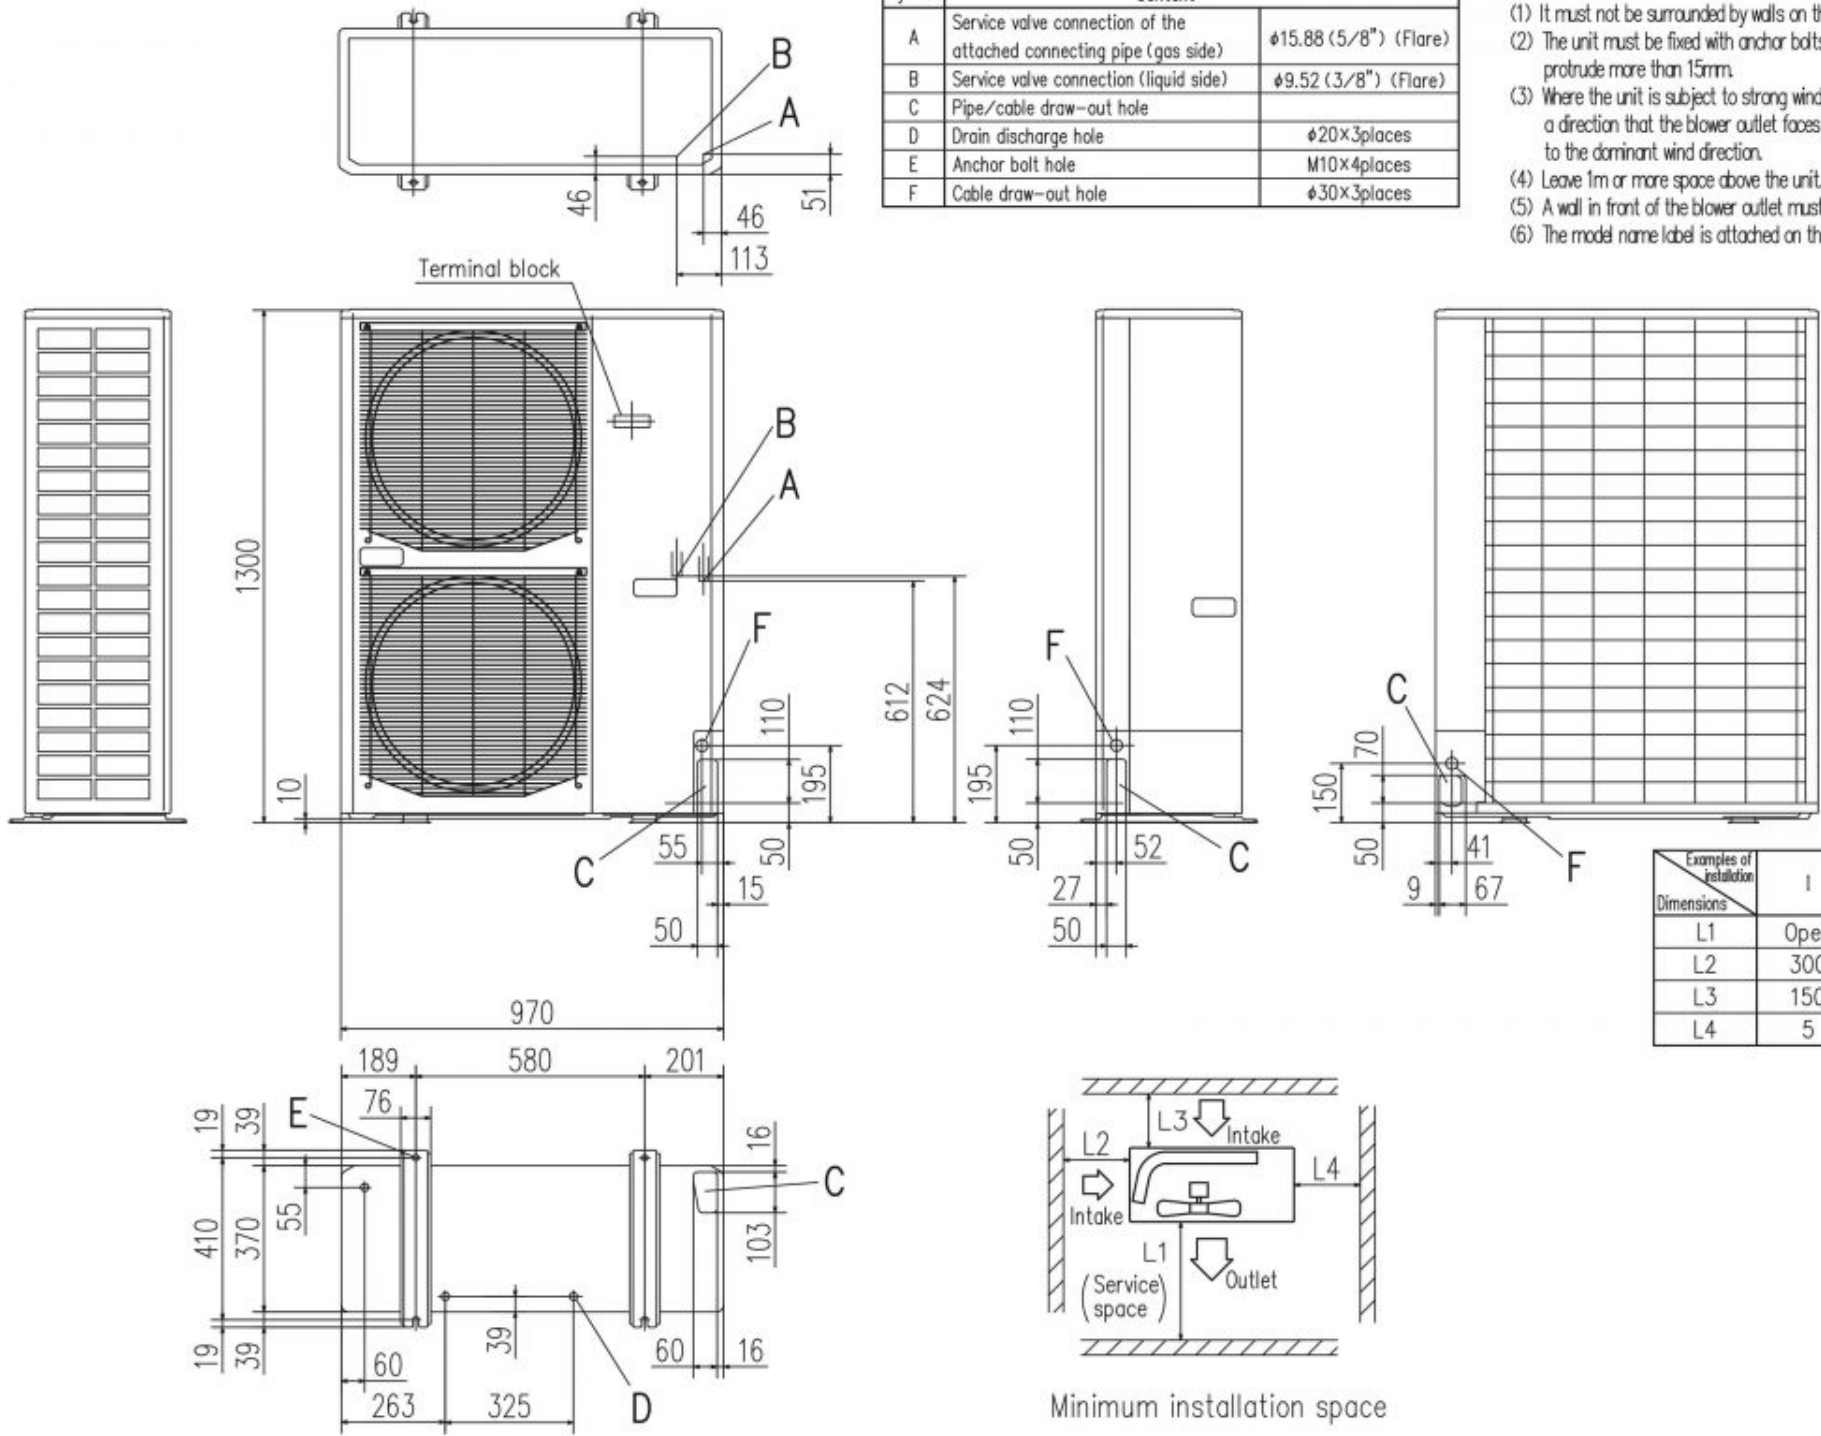

| Examples of installation<br>Dimensions | I    | II   | III  |
|----------------------------------------|------|------|------|
| L1                                     | Open | Open | 500  |
| L2                                     | 300  | 5    | Open |
| L3                                     | 150  | 300  | 150  |
| L4                                     | 5    | 5    | 5    |