





**FDC200VSA-W, 250VSA-W, FDC280VSA-W
FDC250VSA**

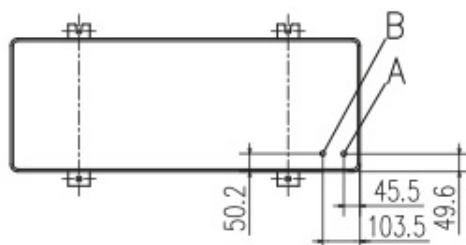

Symbol	Content
A	Service valve connection of the attached connecting pipe (gas side) #19.05 (3/4") (Flare)
B	Service valve connection (liquid side) 200V: #9.52 (3/8") (Flare) 250V, 280V: #12.7 (1/2") (Flare)
C	Cable draw-out hole (front-side) #30x2places
D	Cable draw-out hole (front-side) #45x2places
E	Cable draw-out hole (back) #50
F	Pipe/cable draw-out hole 4places
G	Drain discharge hole #20x3places
H	Anchor bolt hole M10x4places

Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts.
An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the unit's height.
- (6) The model name label is attached on the lower right corner of the front panel.
- (7) Connect the service valve with local pipe by using the pipe of the attachment.
(Gas side only)
- (8) Regarding attaching the pipe of accessories, refer to an attached installation manual.

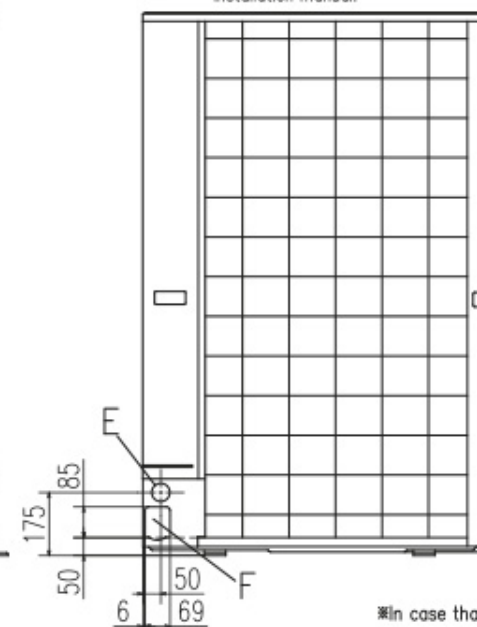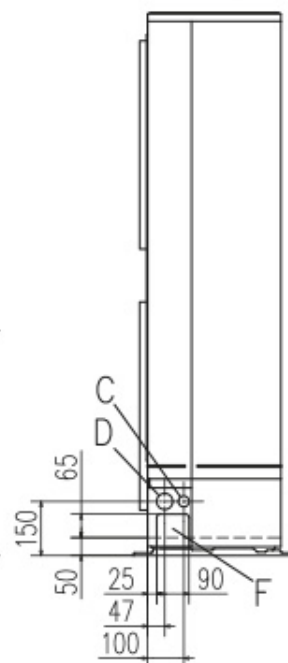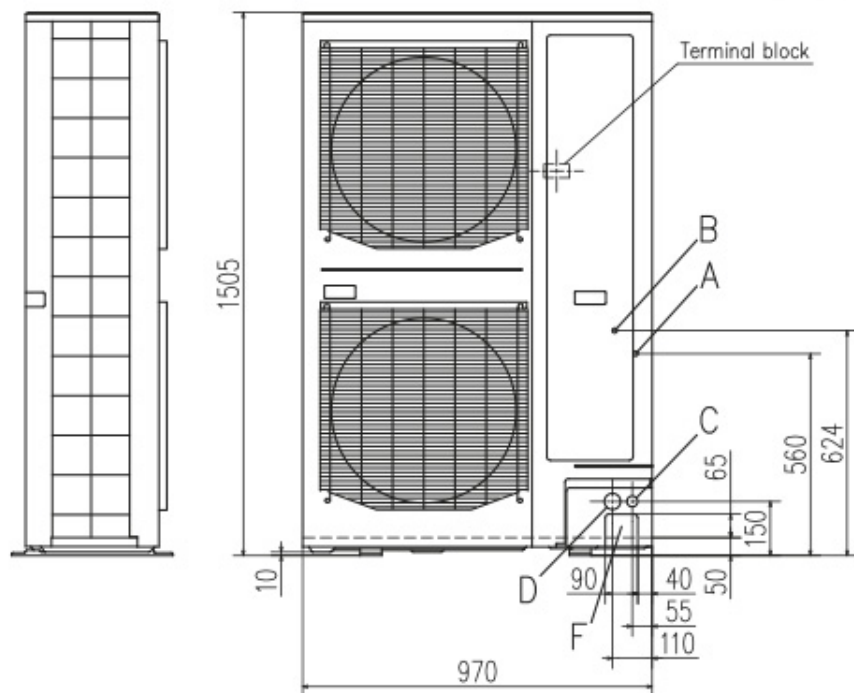


※In case that outdoor temperature is 44℃ or lower

Examples of installation				
Dimensions		I	II	III
	L1	Open	Open	500
	L2	300	5	Open
	L3	150	300	150
	L4	250 (5) ※1	250 (5) ※1	250 (5) ※1

※1 If unit is installed in L4 space with ()'s condition, secure space of 250mm in lateral (L4) by unit movement at the time of exchange work of compressor.

※In case that outdoor temperature is higher than 44℃

Examples of installation				
Dimensions		I	II	III
	L1	Open	Open	2400
	L2	300	750	Open
	L3	300	300	300
	L4	750	300	1500

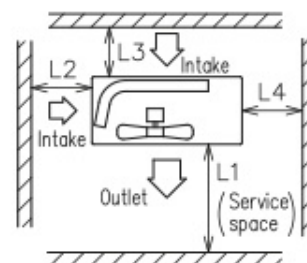

Minimum installation space