Wall Template Paper

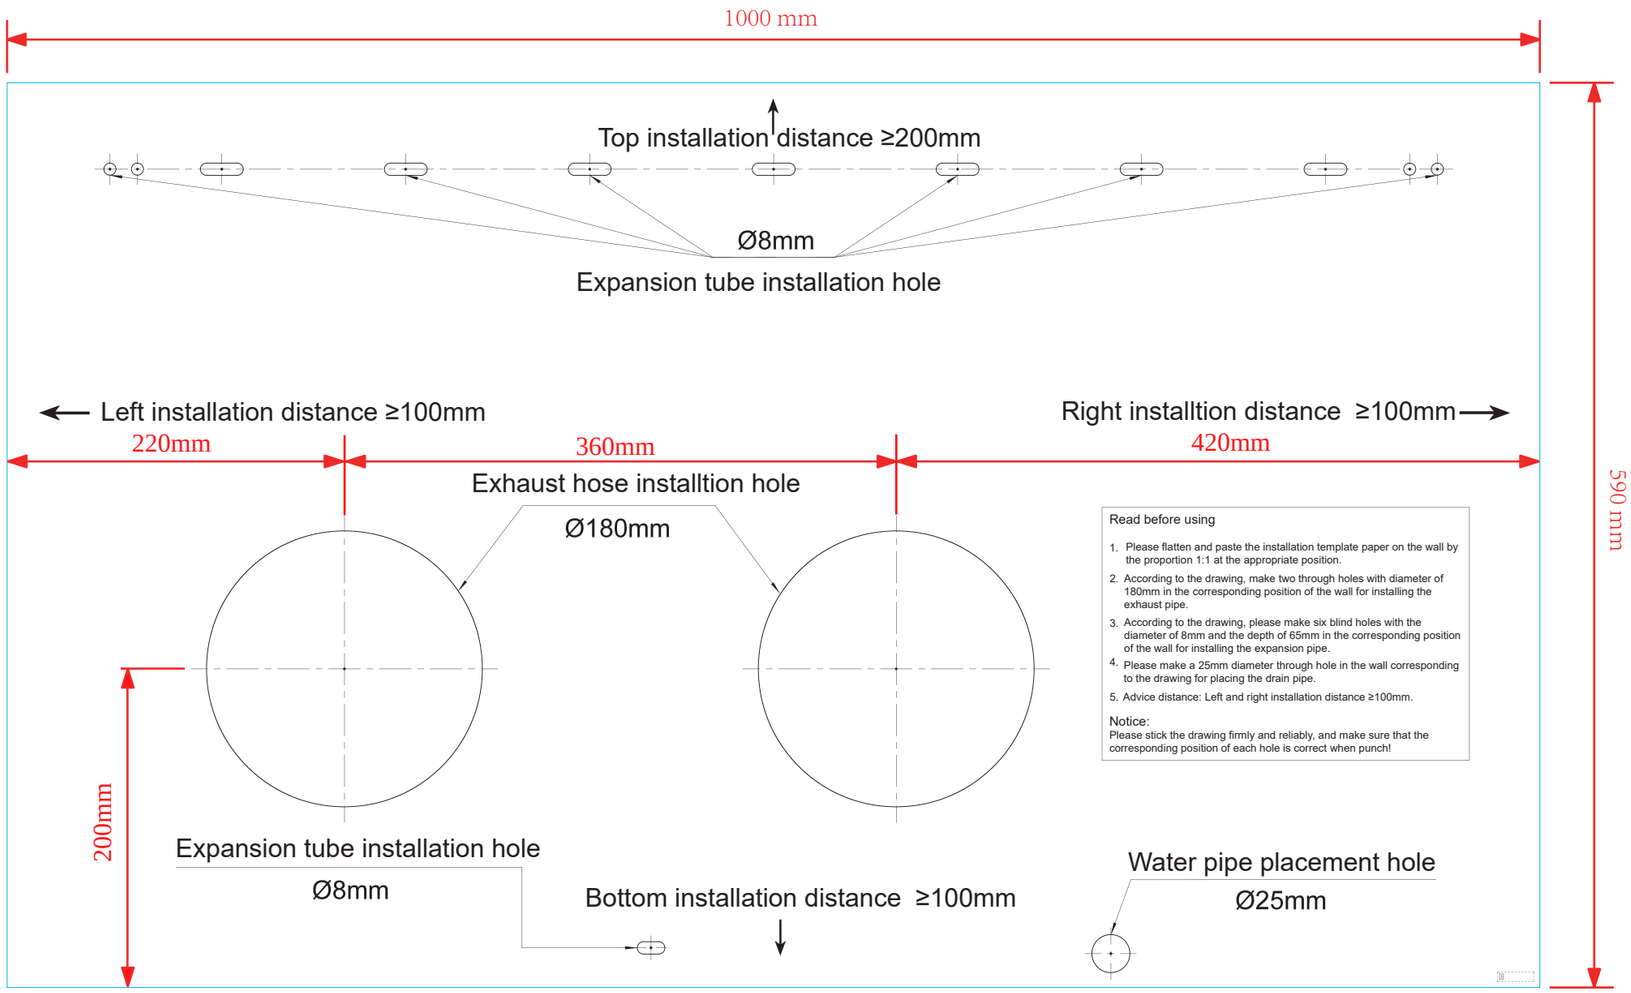

Read before using

1. Please flatten and paste the installation template paper on the wall by the proportion 1:1 at the appropriate position.
2. According to the drawing, make two through holes with diameter of 180mm in the corresponding position of the wall for installing the exhaust pipe.
3. According to the drawing, please make six blind holes with the diameter of 8mm and the depth of 65mm in the corresponding position of the wall for installing the expansion pipe.
4. Please make a 25mm diameter through hole in the wall corresponding to the drawing for placing the drain pipe.
5. Advice distance: Left and right installation distance ≥100mm.

Notice:
Please stick the drawing firmly and reliably, and make sure that the corresponding position of each hole is correct when punch!