

Technical data sheet

Advanced Engineering Ltd
Guardian House, Stroudley Road
Basingstoke, Hampshire, RG24 8NL, UK
Tel +44(0)1256 460300
www.advancedengineering.co.uk

**advanced
engineering**

DrainKleen® one shot

Condensate drain cleaner



Special Features



- Higher specific gravity than water

DrainKleen® one shot has been formulated specifically to clear organic blockages found in condensate drains within air conditioning and refrigeration units. It is a powerful and effective liquid drain cleaner which is the perfect size to treat a single condensate drain. The unique "swan neck" spout of the dispenser bottle allows for easy application of the product in awkward to reach condensate drains.

PRODUCT SPECIFICATION

Name	DrainKleen® one shot
Product Code	S010106GB, S010146GB
Packing Quantity (ml, L)	12 x 250ml, 4 x 5 Litre
Packing Size (L x H x D cm)	22.5 x 18 x 20.5, 40 x 30 x 27
Shipping Weight (kg)	4.6, 27.52
Shipping Volume (m ³)	0.0112, 0.0324
Soils	Organic obstruction, rust deposits, limescale

Directions of use

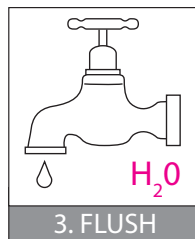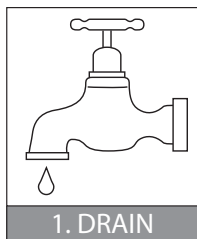

Remove excess water from condensate tray, and condensate drain, if possible. Gently pour DrainKleen® one shot into the tray and allow it to enter the drain. Allow DrainKleen® one shot to remain in the condensate tray and drain for five minutes or until obstruction is cleared. Flush out with fresh water for 2-3 minutes. Repeat as necessary until obstruction is cleared.

DrainKleen® one shot contains special inhibitors which control the cleaning action, making it safe to use on most metal, concrete and plastic surfaces. It is ideal for use in a planned preventative maintenance programme.



DrainKleen® one shot
UN1760
Danger
Contains: Sodium Hydroxide

H314: Causes severe skin burns and eye damage. P262: Do not get in eyes, on skin, or on clothing. P264: Wash hands thoroughly after handling. P280: Wear protective gloves / protective clothing / eye protection / face protection. P301+330+331: IF SWALLOWED: rinse mouth. Do NOT induce vomiting. P303+361+353: IF ON SKIN (or hair): Take off immediately all contaminated clothing. Rinse skin with water/shower. P305+351+338: IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.

Approved by



BlueDiamond
The only fit and forget condensate pump



This product should only be used by trained operatives. The "directions of use" are recommendations only; correct use will depend upon circumstances. To the extent permitted, no liability can be accepted for loss resulting from its use. Advanced Engineering follows a policy of continual product improvement. For this reason, some materials and specifications could change without notice. Consult Safety Data Sheet for full safety information. Always wear suitable PPE.

TDS Subject to change, document valid for 12 months from the following date, Last correct on: 01/03/18